




Attic Baffle Installation: Before:



Installed Cardboard Baffle was attached to the lower of the two rafters, creating a large airspace, reducing the insulation levels over the exterior walls.



Baffle goes out to top plate, leaving only an inch for insulation.

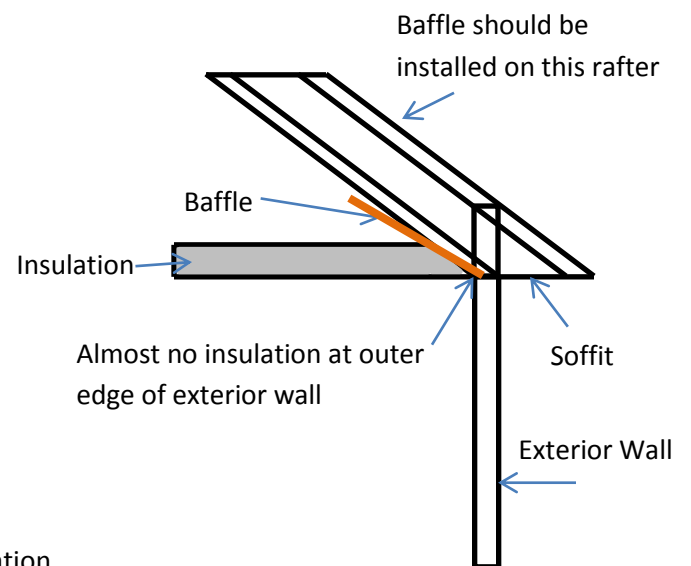




Attic Baffle Installation After:



Cardboard baffle was moved to proper rafter to ensure top plate was insulated fully

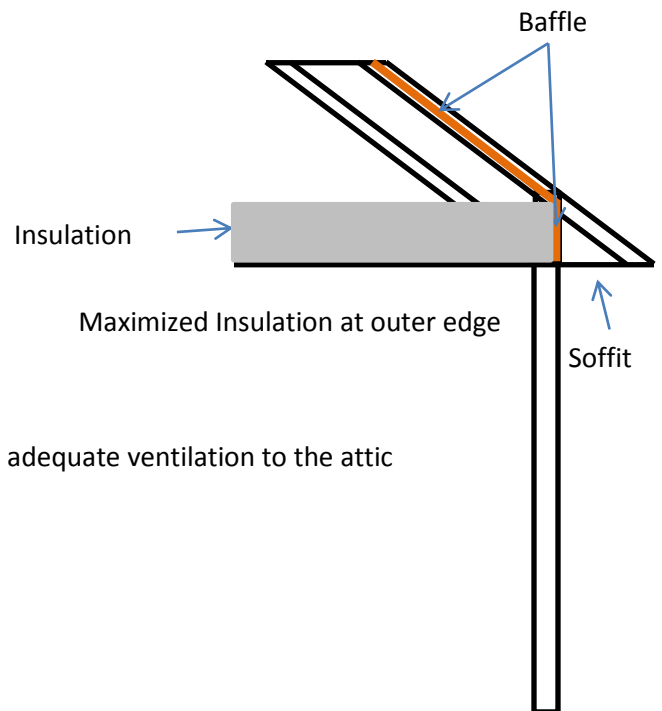

The airspace between the sheathing and cardboard still allows adequate ventilation to the attic